



SENSORS	DESCRIPTION	hk\) y#u#\) -
	Door Spread Master, Warp Measurement Sensor	701MAR
	Door Spread Master, Warp Measurement, Angle Sensor	701MAA
	Door Spread Master, Warp Measurement, Angle, Temp Sensor	701MAT
	Door Spread Master, Warp Measurement, Depth Sensor	701MD
	Door Spread Master, Warp Measurement, Depth, Angle Sensor	701MAD
	Door Spread Master, Warp Measurement, Temp Sensor	701MT
	Door Spread Master, Warp Measurement, Depth, Temp Sensor	701MDT
	Door Spread Slave Sensor	701SLHP
	Warp Measurement Sensor	701R
	Warp Measurement, Angle Sensor	701AR
	Warp Measurement, Angle, Temp Sensor	701AT
	Warp Measurement, Depth Sensor	701DR
	Warp Measurement, Depth, Angle Sensor	701AD
	Warp Measurement, Depth, Angle, Temp Sensor	701ADT
	Warp Measurement, Temp Sensor	701TR
	Warp Measurement, Depth, Temp Sensor	701DTR

SENSORS	DESCRIPTION	PRODUCT CODE
	Trawl Alignment Sensor	701TA
	Depth Distance Sensor	701DR
	Depth Distance Sensor With Cage	701DRC
	Temperature Depth Distance Sensor	701DTR
	Catch Sensor	701CR
	Headline Height Sensor	701HH
	Footline Slave	701FS
	Master O Sensor	701MWR
	Slave O Sensor	701SWHP
	Grid Sensor Including Attachment Bracket	701GR
	Bottom Contact Sensor	701BCR
	Door Height Sensor	701DH
	Echo Sensor	721SR
	Echo Temperature Sensor	721SRT